


SCREWS

Self-tapping screws are available for securing PCBs and mounting plates as well as components.

Installation instructions: Please note the different types of cross-head screws (PZ / PH) as well as the size of the screwdriver.

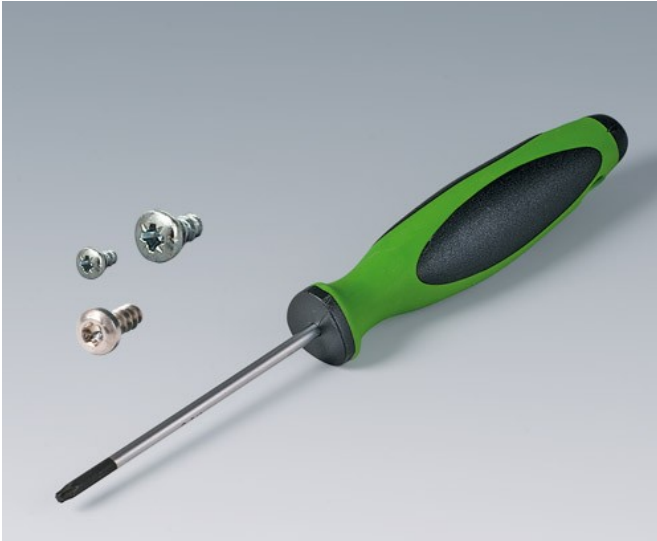

Select Versions



A0304031
Self-tapping screws 0.087" x
0.197" (PZ1)



A0305031
Self-tapping screws 0.098" x
0.236" (PZ1)



A0306031
Self-tapping screws 0.118" x
0.236" (PZ1)



A0308031
Self-tapping screws 0.118" x
0.315" (PZ1)

SCREWS



A0308132
 Self-tapping screw 0.118" x
 0.315" (T10)
 Stainless steel



A0325060
 Self-tapping screw 0.098" x
 0.236" (T8)
 Stainless steel



A0325080
 Self-tapping screws 0.098" x
 0.315" (PZ1)



A0330080
 Screw M3 x 3.150" (T10)
 Stainless steel



A0399T06
 Torx T6 screwdriver



A0399T08
 Torx T8 screwdriver



A0399T20
 Torx T20 screwdriver



A9199008
 Set of screws



B5111201
 Set of screws

Accessory



A0399T10
 Torx T10 screwdriver